




Canon PowerShot A460 Front Lens Replacement

This guide will show how to repair the front lens of the camera.

Written By: Tanner Coleman

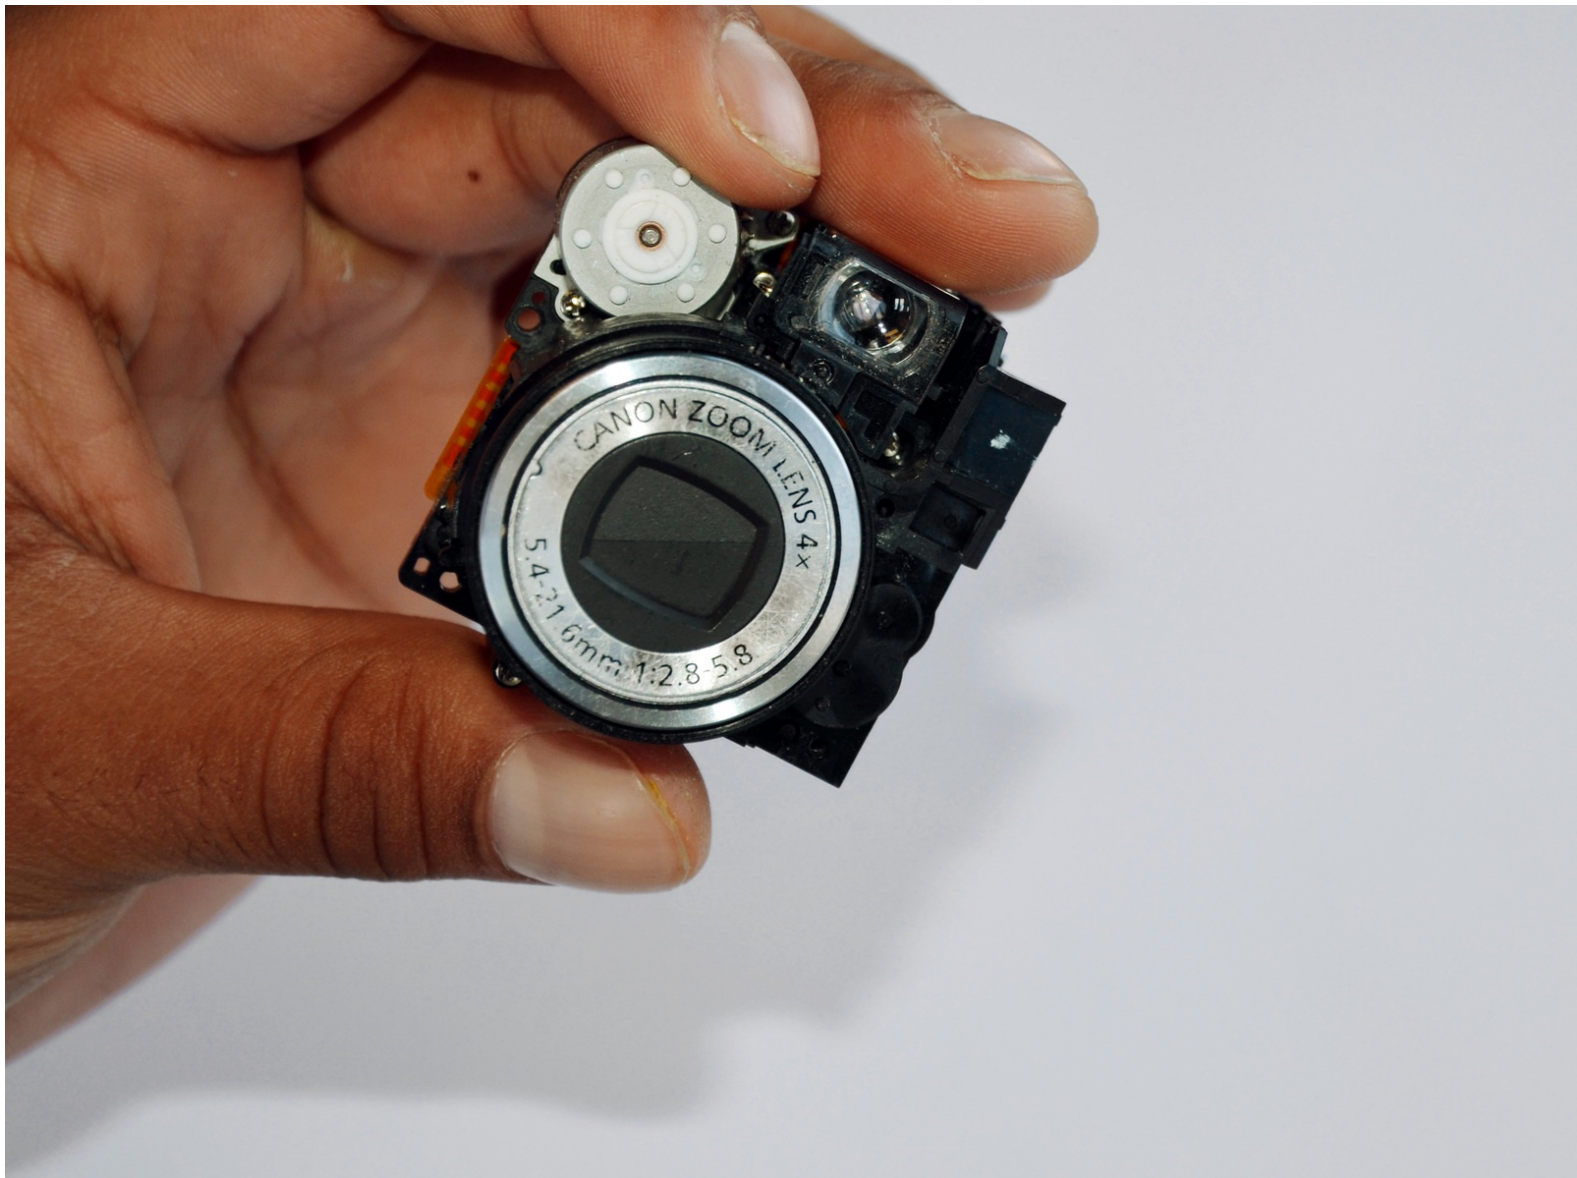

INTRODUCTION

This guide will involve complete disassembly of the camera.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery



- Slide the switch on the battery cover labeled "CARD/BATT. OPEN." to the right.
- While still holding the switch, pull the cover down, allowing it to release and open.

Step 2



- Tilt the camera slightly to allow the batteries to fall out.

Step 3



- Press on and release the memory card to eject it.

Step 4 — Front Casing



- Unscrew the 5mm Phillips #00 screw from the bottom of the camera.
- ☑ Make sure to keep the different size screws organized to make reassembling the camera simpler.

Step 5



- Unscrew the three 2mm Phillips #00 screws that are located on the bottom of the camera.

Step 6




- Remove the 4mm Phillips #00 screw that is located on the left side of the camera, if the display screen is facing you.

Step 7






- Take out the 4mm Phillips #00 screw under the rubber flap on the right end of the camera.

Step 8

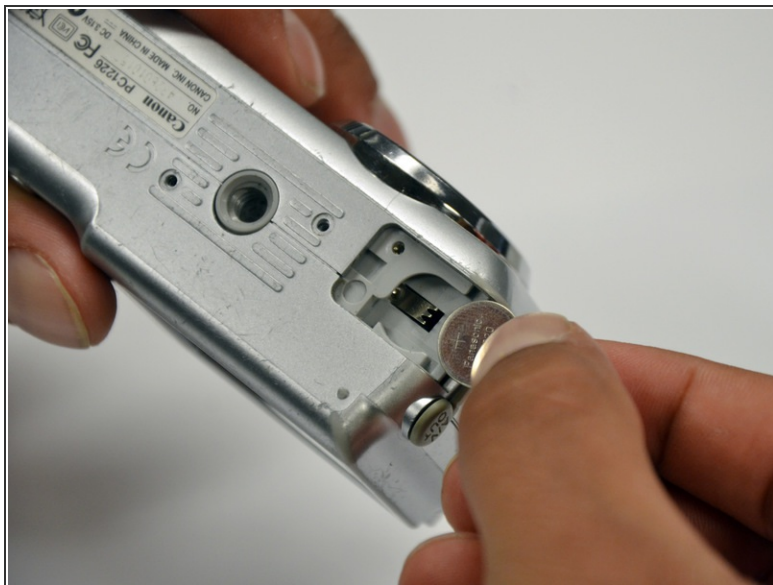



- Remove the second battery cover on the bottom of camera.
- Take the silver battery out of the camera.

Step 9

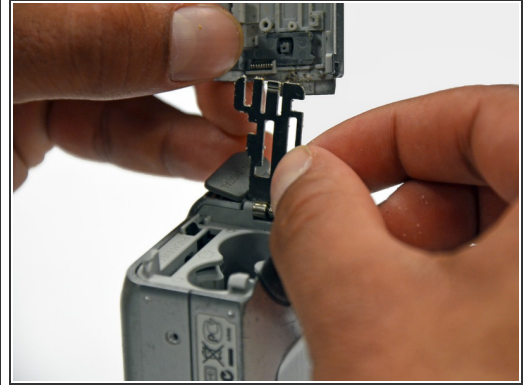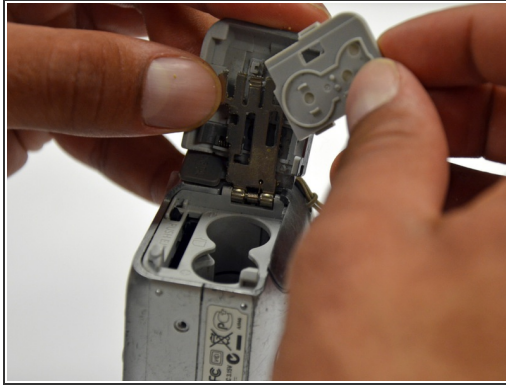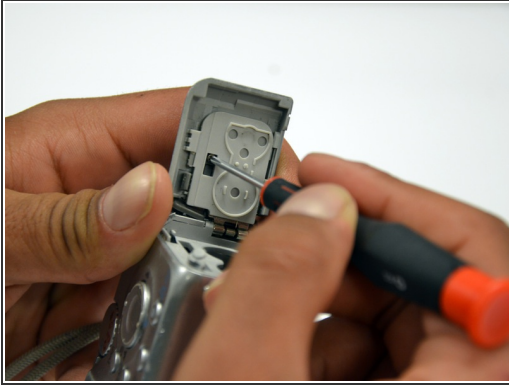


- Remove the 4mm Phillips #00 screw on the inside of the flap that hides the battery and memory card slots.
- Remove the light grey, plastic piece.
- Remove the plastic portion of the battery flap cover. The metal piece will remain attached.

Step 10

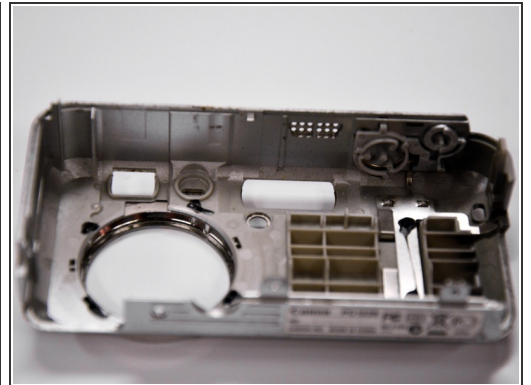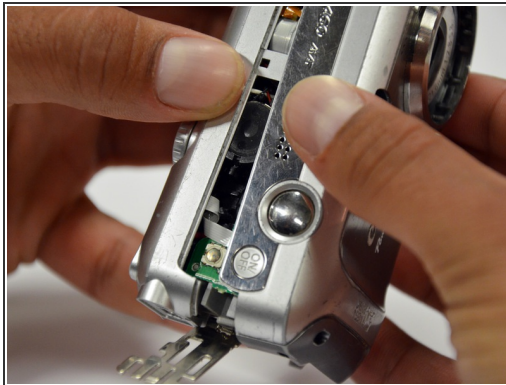

- Slightly pull on each side of the camera. It should loosen up and come apart.
- If it does not pull apart right away, use a little more force.
- Do not give up!


Step 11 — Back Casing

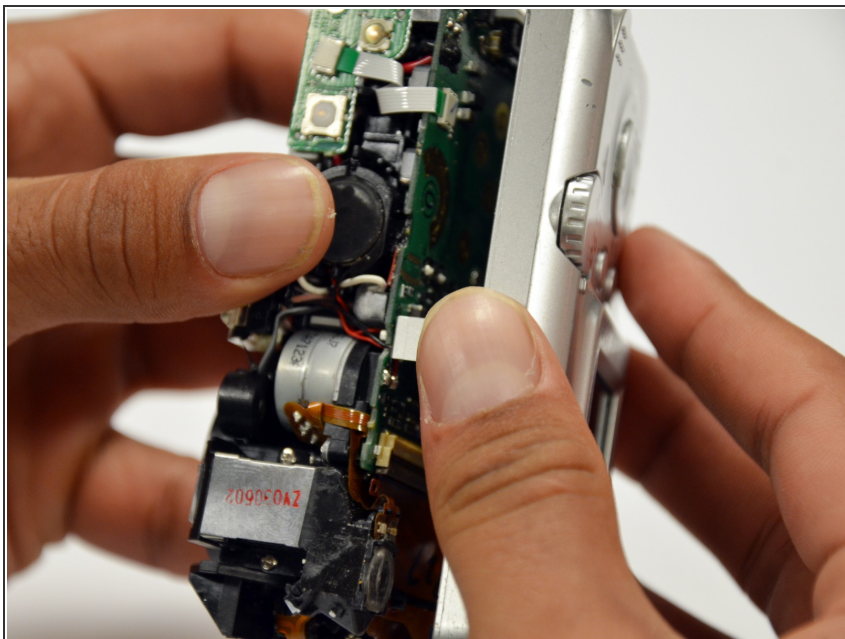

- Remove the back case of the camera by pulling from the top.


⚠ Be careful when pulling off the case. There is a delicate gold ribbon connecting the bottom of the camera to the back case.

Step 12 — LCD Screen

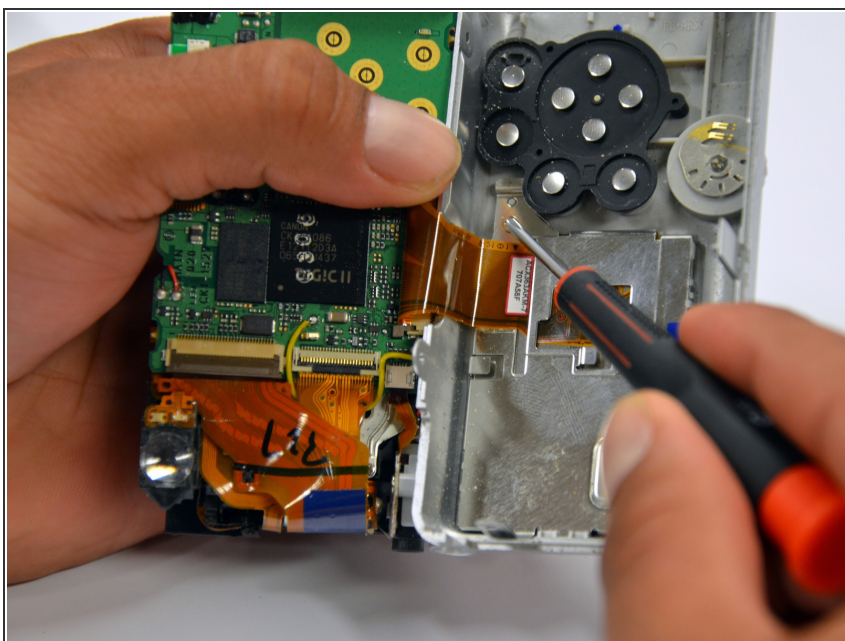


- Remove the 4mm Phillips #00 screw from above the ribbon.

Step 13

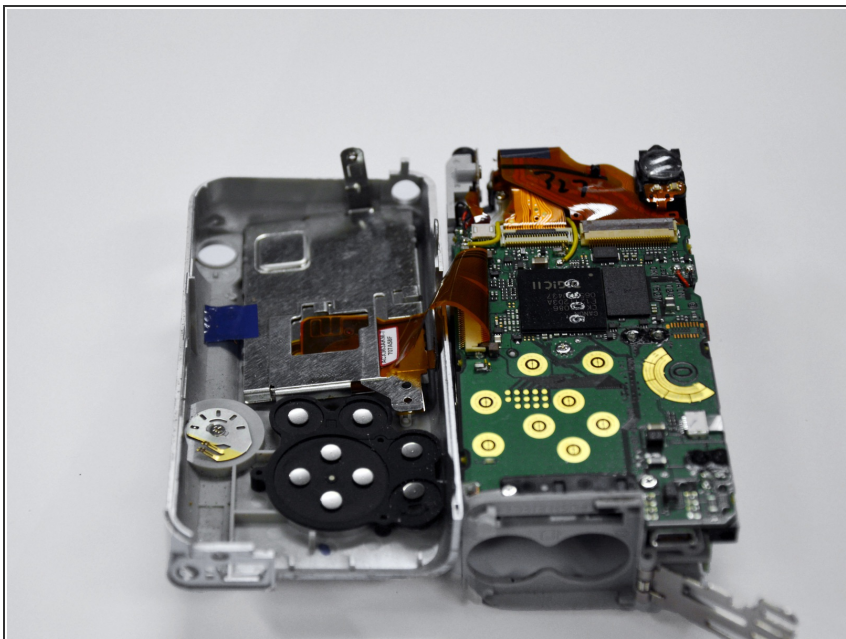


- Gently peel off the blue tape on the top of the LCD screen.

Step 14

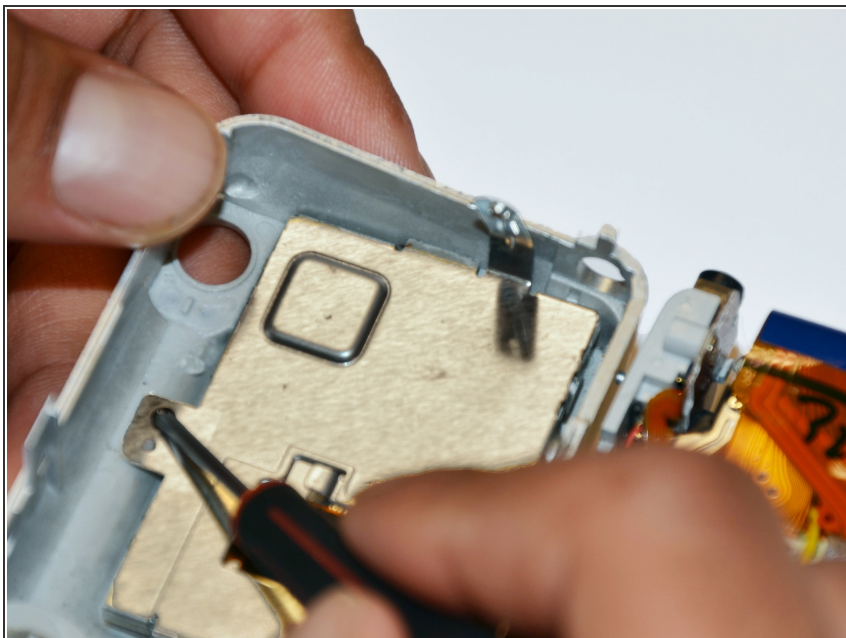


- Remove the 4mm Phillips #00 screw previously concealed by the blue tape.

Step 15

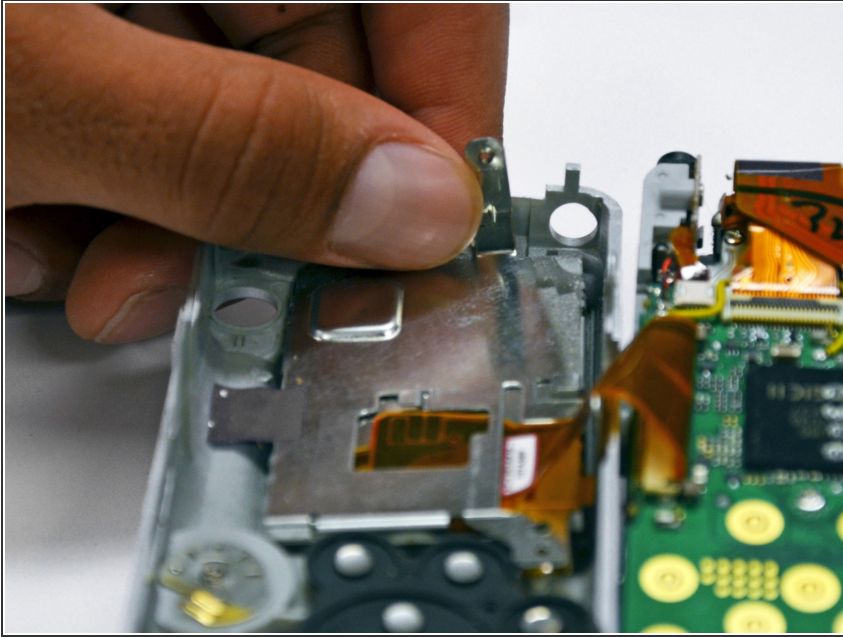


- Gently lift the LCD screen off of the front casing by pulling up a tab on the side of the camera.

Step 16

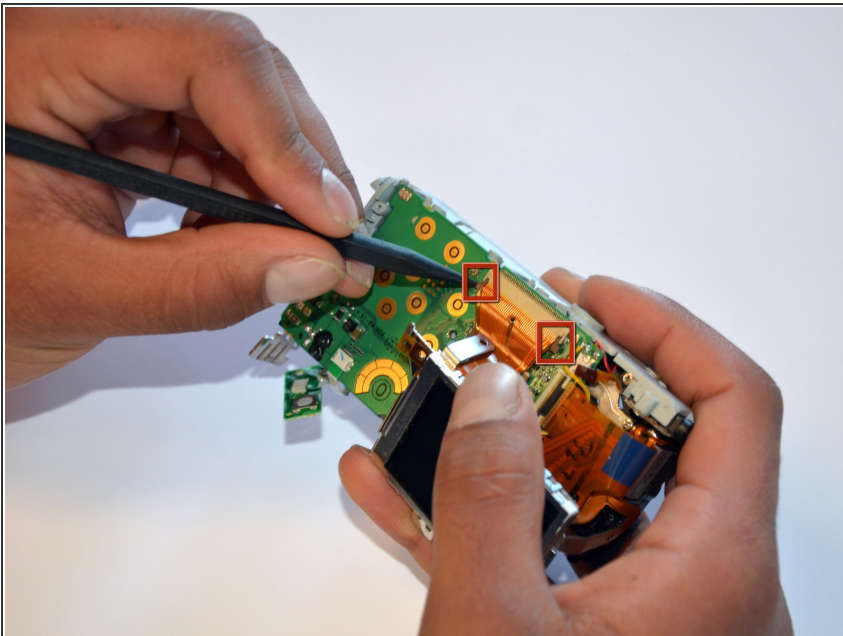


- Using a spudger, lift the grey tabs to allow the ribbon to slide out.


Step 17

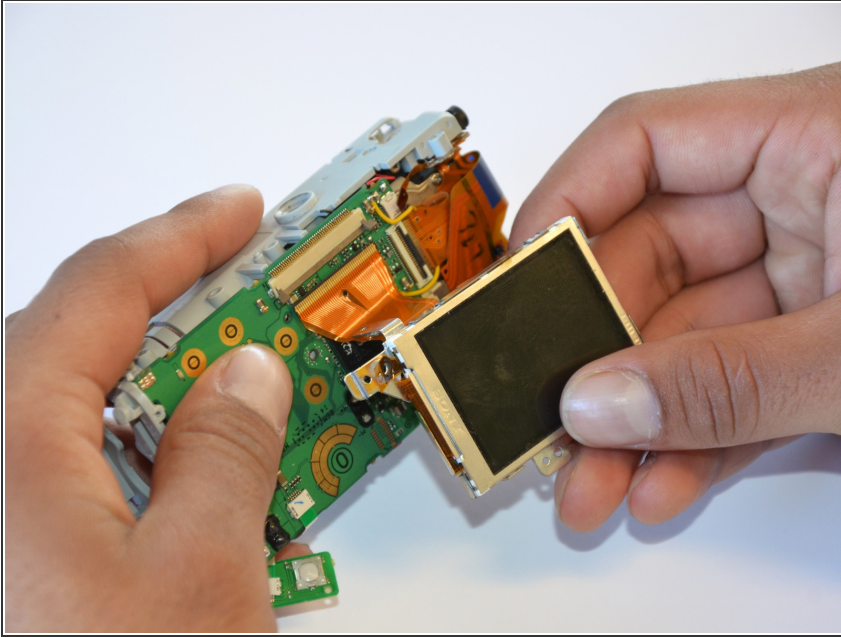

- Since the tabs have been lifted, the ribbon should now slide out easily.



 Be careful not to distort the ribbon in any way.

Step 18 — Motherboard

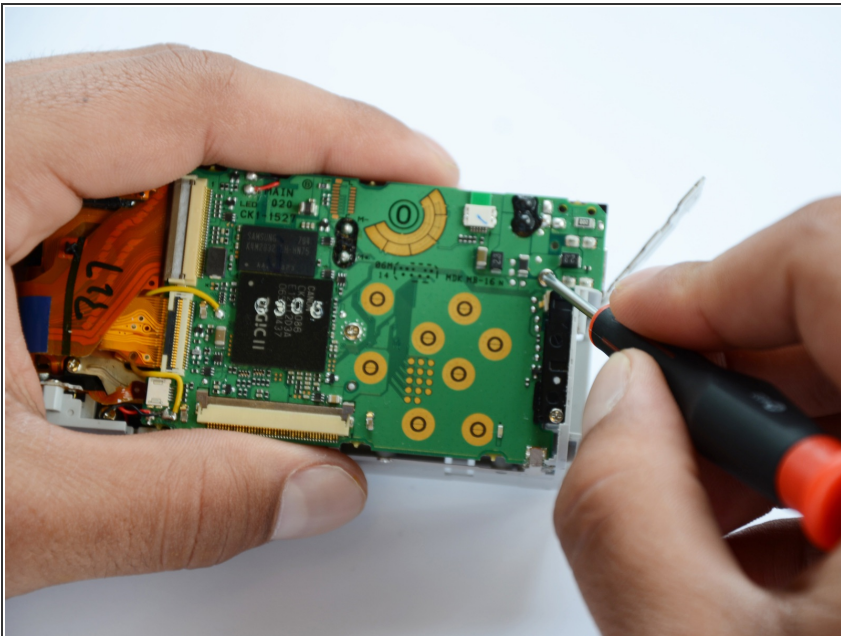


- Remove the 5mm Phillips #00 screw located above the small black piece on the right side of the mother board.

Step 19

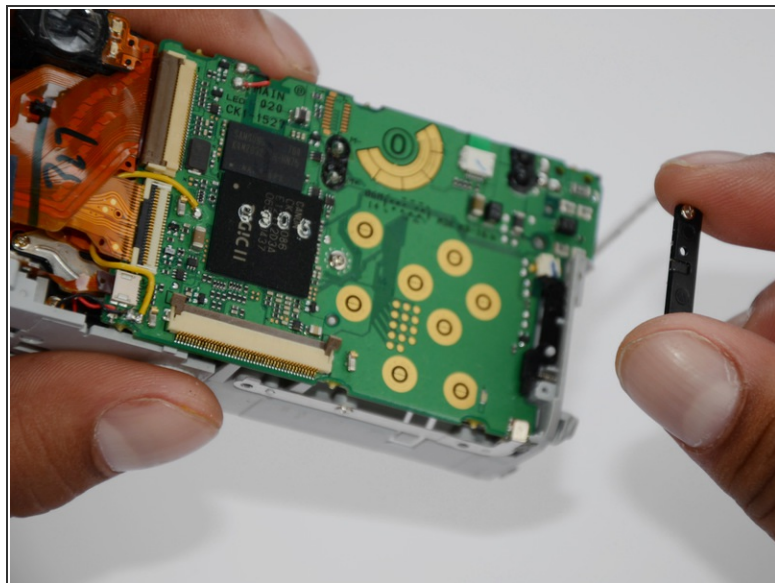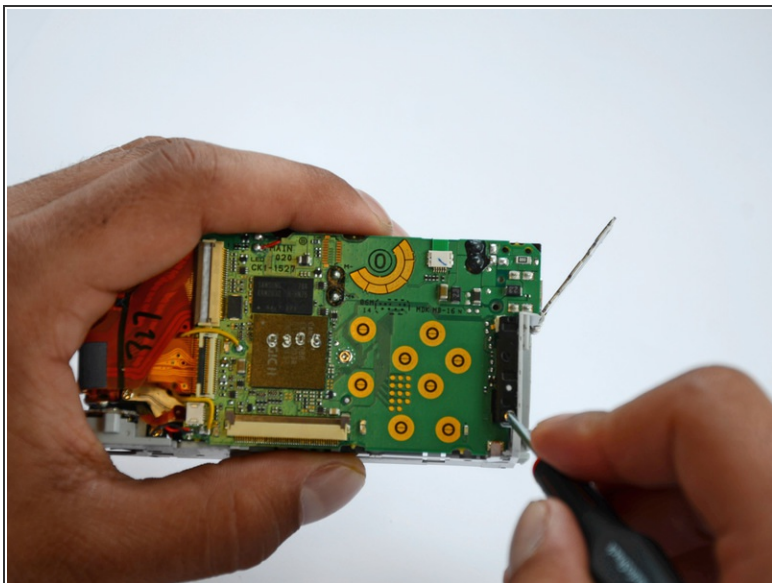


- Remove the 4mm Phillips #00 screw at the bottom of the black piece.
- Detach the black piece that the screws previously held in place.

Step 20

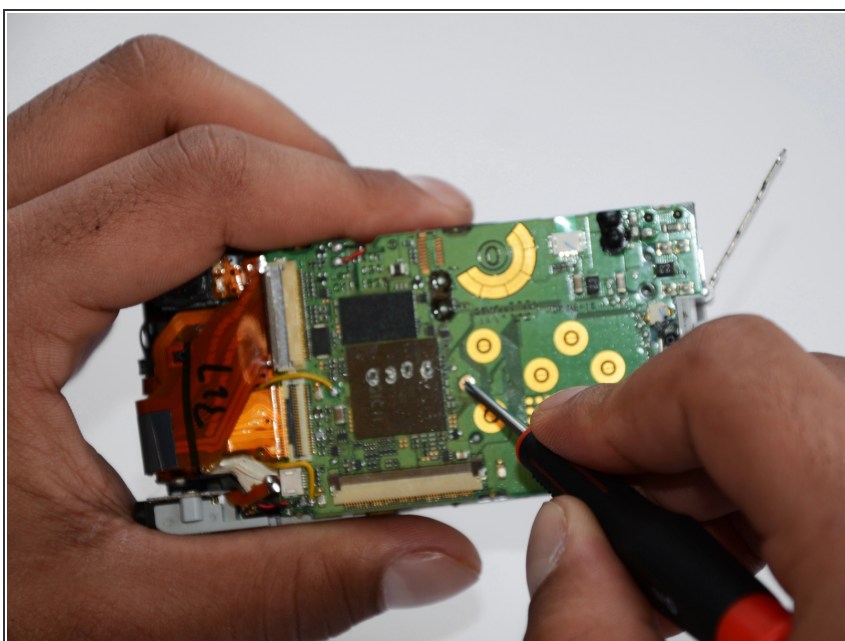


- Remove the 5mm Phillips #00 screw in the middle of the motherboard.

Step 21

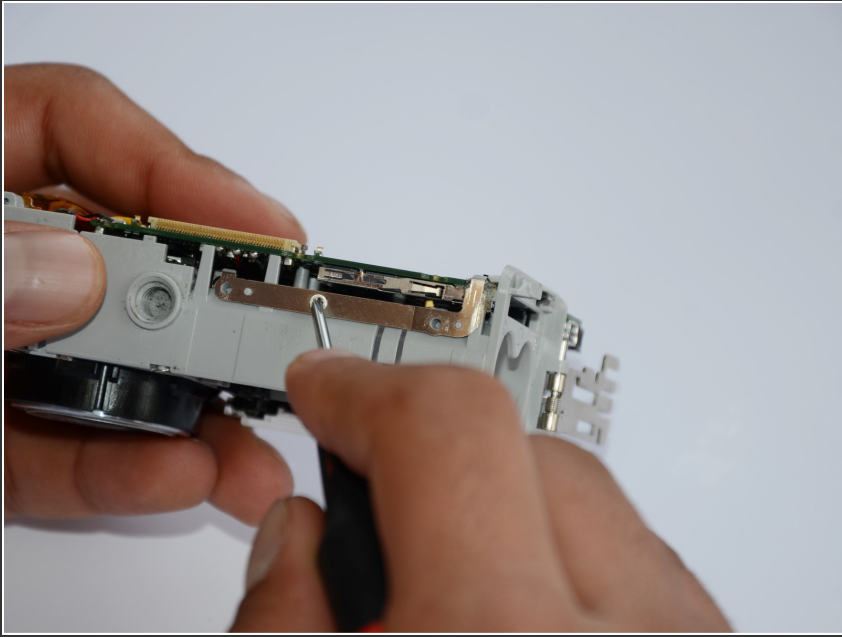


- Remove the 5mm Phillips #00 screw that holds the metal piece to the bottom of the camera .

Step 22

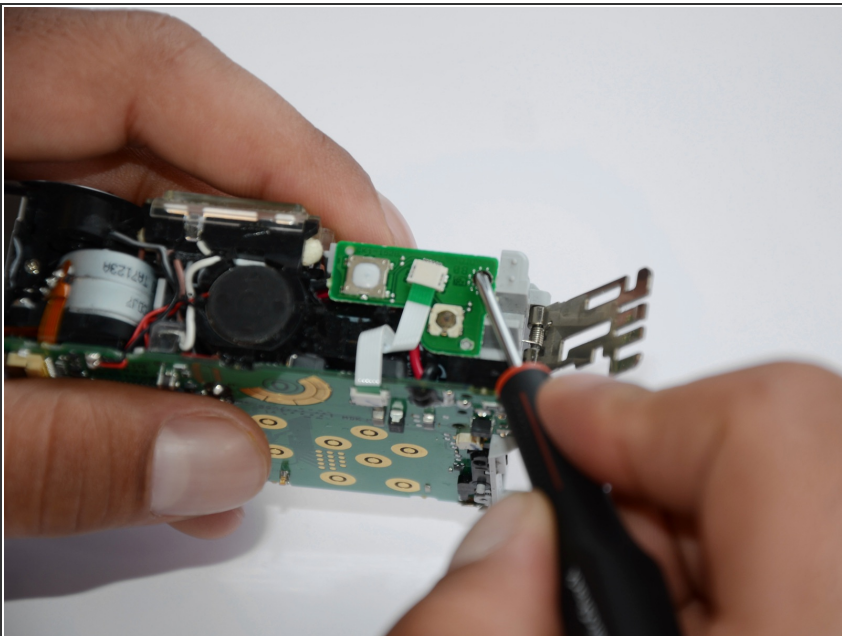

- Remove the 5mm Phillips #00 screw that is located on the top of camera.


Step 23

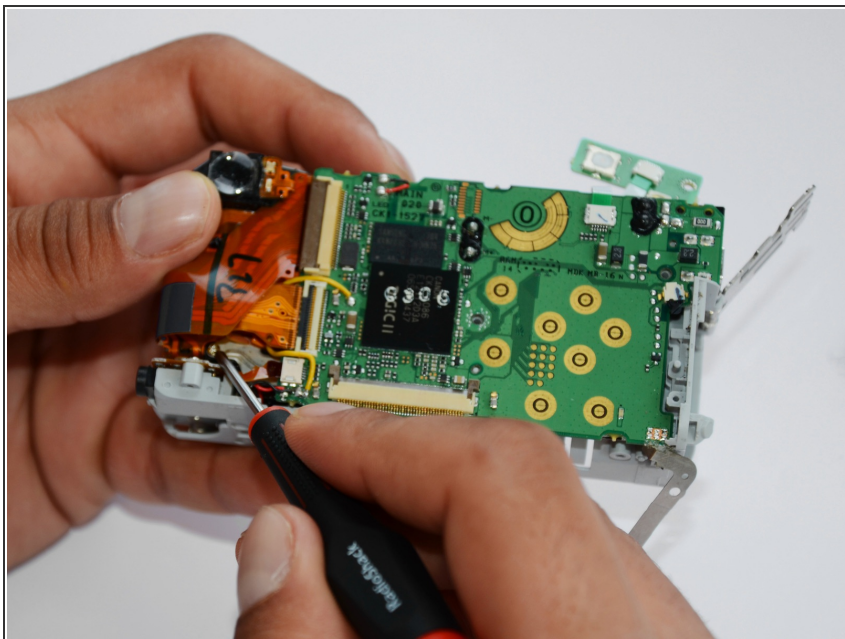

- Remove the 2mm Phillips #00 screw that is located on the far left of the motherboard.



⚠ Be careful not to damage the multiple adjacent orange ribbons.

Step 24

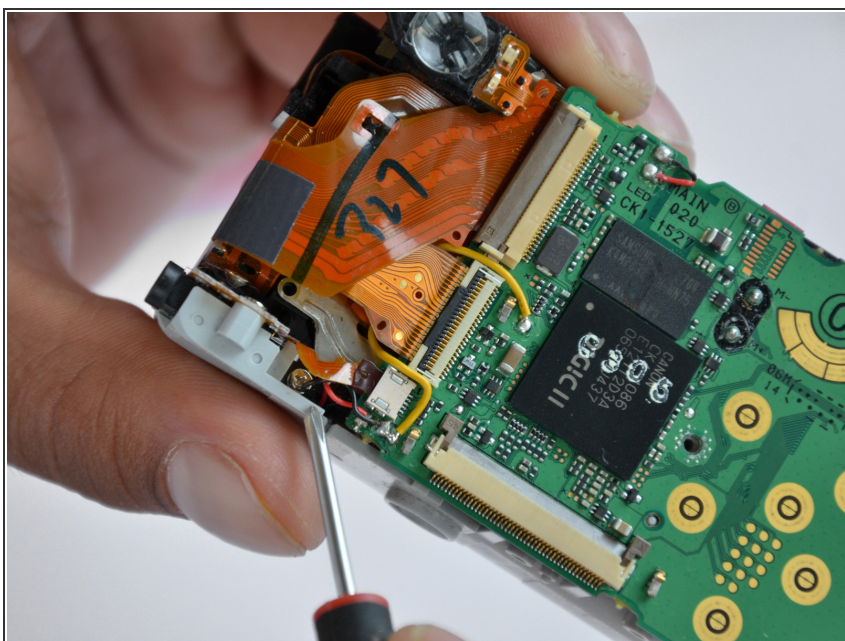


- Remove the 5mm Phillips #00 screw near the bottom left of the motherboard.

Step 25

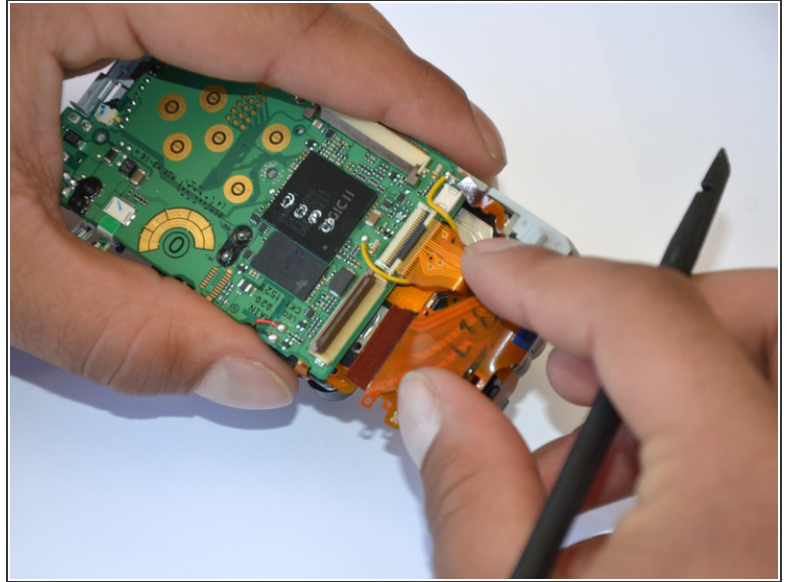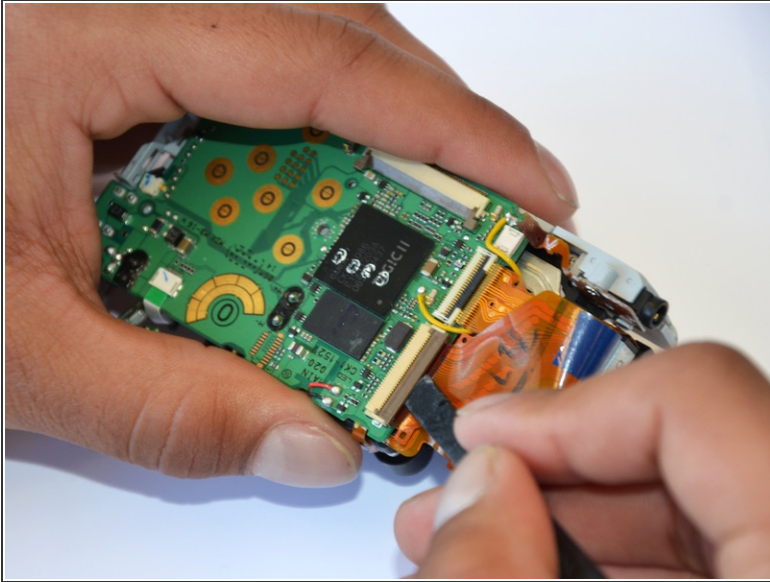


- Using a spudger, unlock the locking mechanism that holds the lower orange ribbon in place.
- Once unlocked, slide out the ribbon.

Step 26

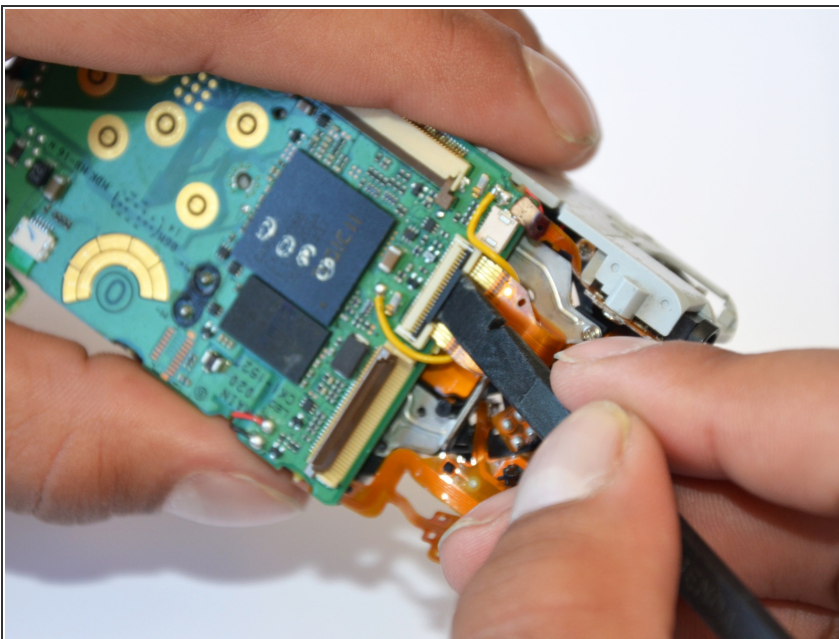


- Using a spudger, unlock the locking mechanism that holds the upper orange ribbon in place.
- Once unlocked, slide out the ribbon.

Step 27

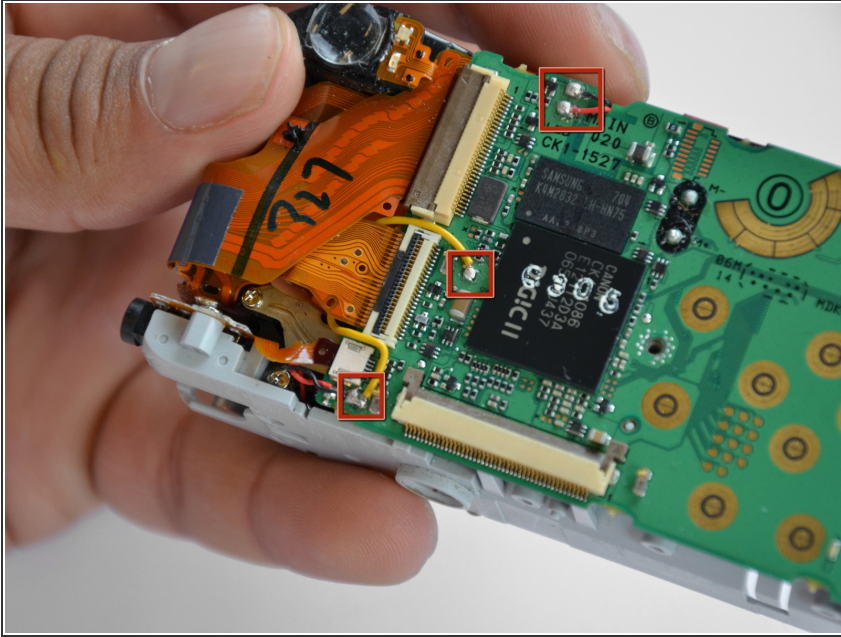



- All that is required is to unsolder the few remaining wires. Then, the motherboard will be ready to be replaced!

Step 28 — Front Lens

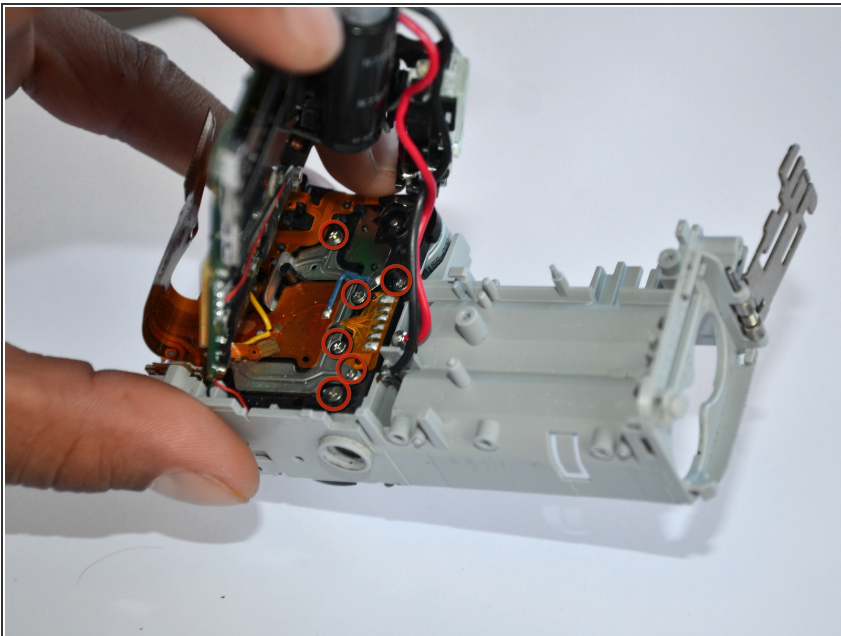


- Remove the six 2mm Phillips #00 screws that are located under the motherboard.

Step 29

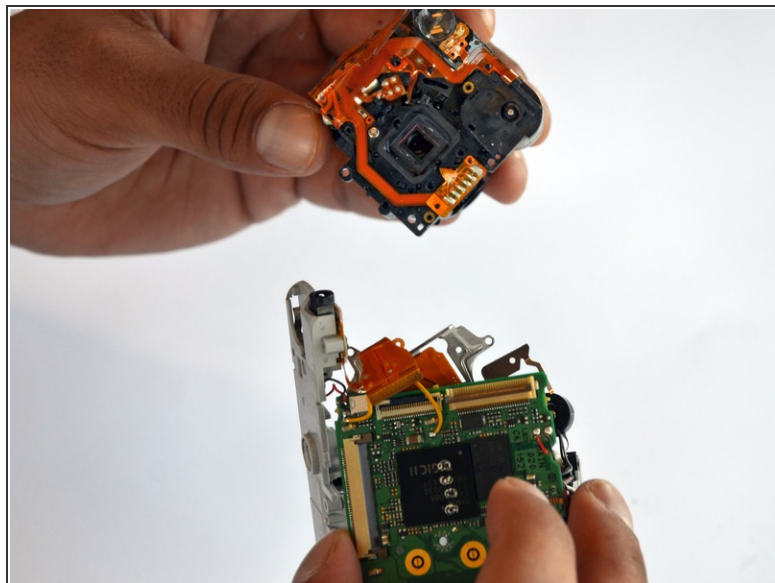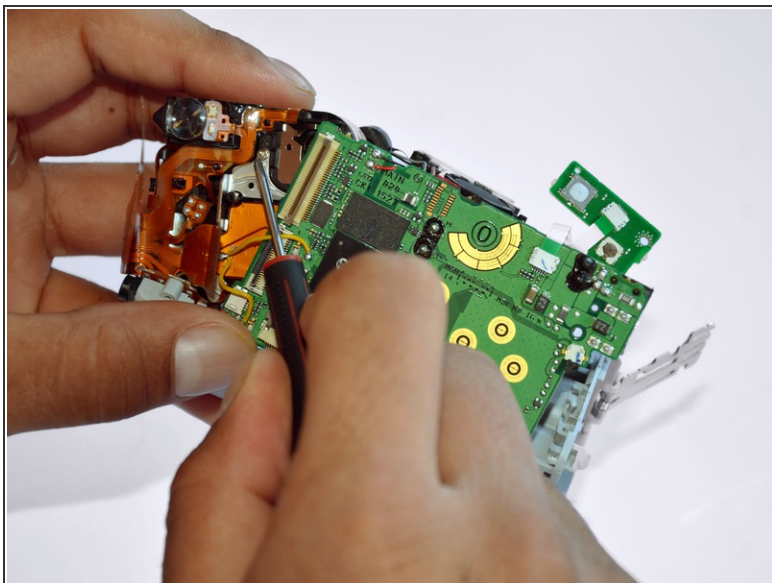


- Remove the 4mm Phillips #00 screw that is located under the now disconnected top orange ribbon.
- The lens piece can now be removed from the camera.

Step 30

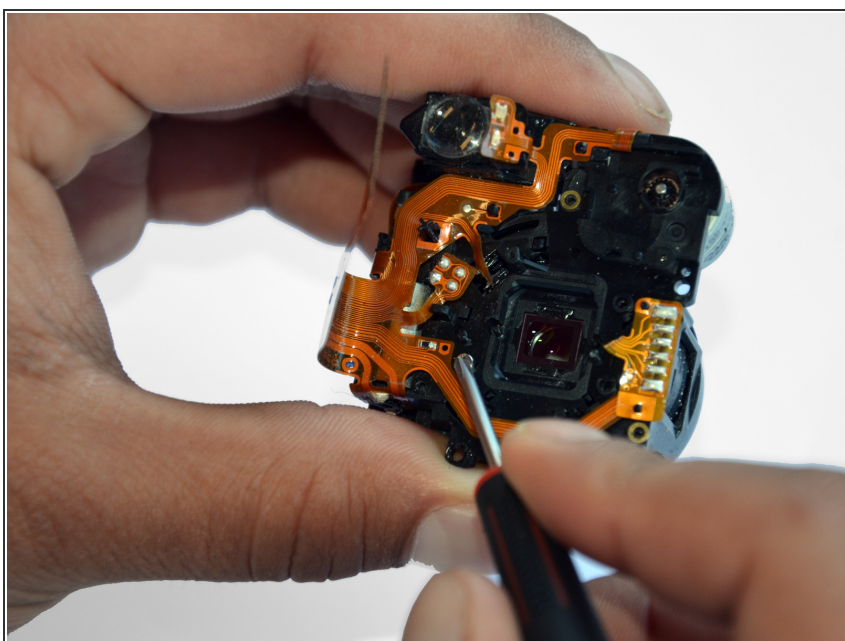


- Remove the 5mm Phillips #00 screw on the back of the lens piece.

Step 31

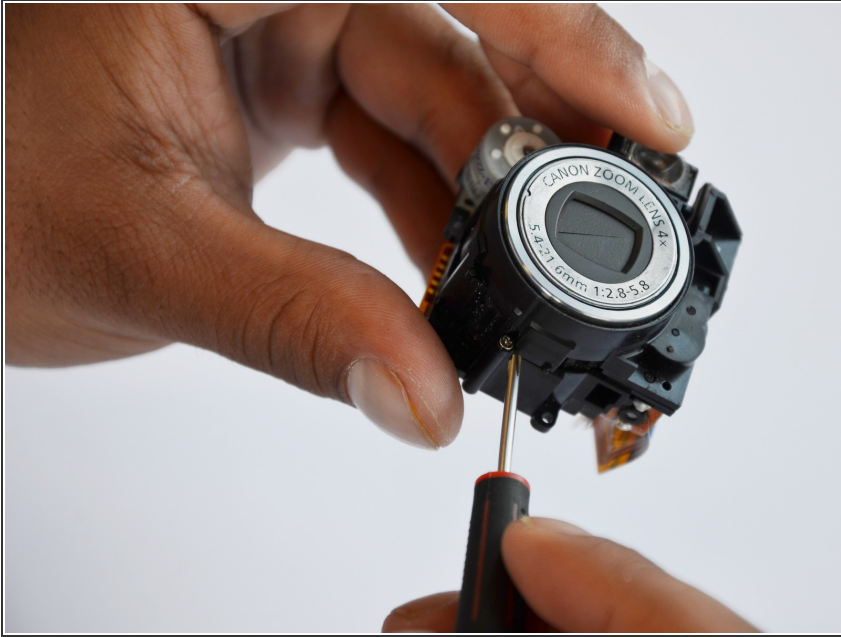


- Remove the 2mm Phillips #00 screw on the bottom of the lens piece.

Step 32

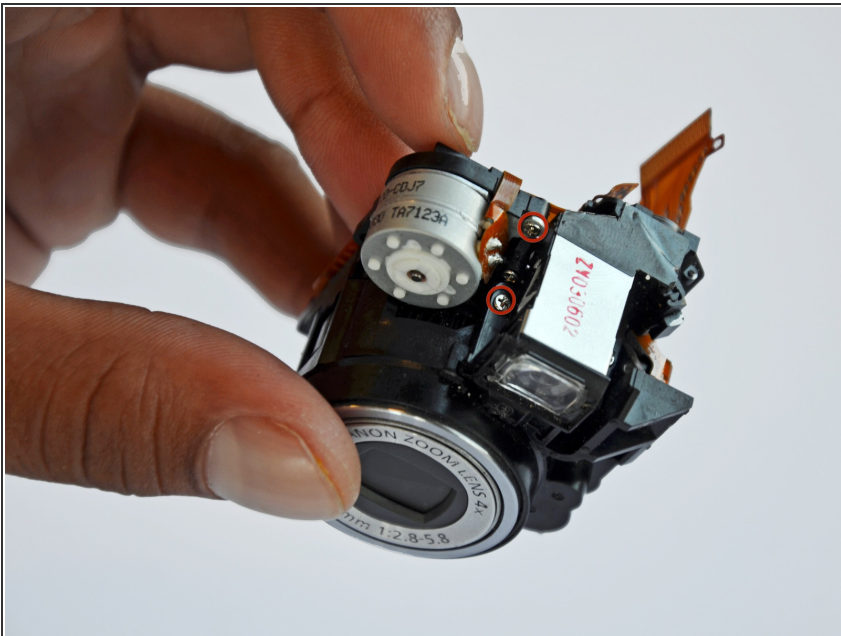

- Remove the two 2mm Phillips #00 screws on the top of the lens piece.

Step 33

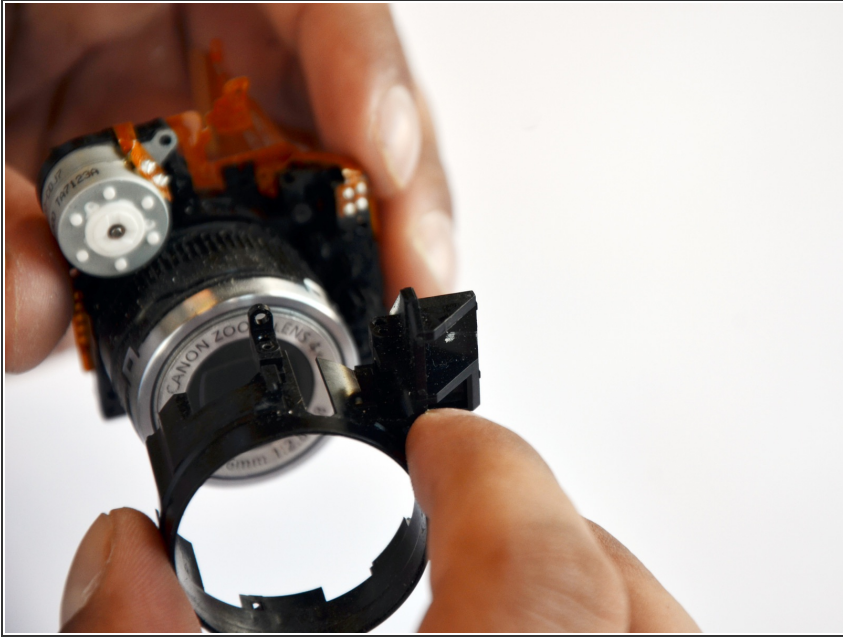

- Gently slide off the black piece surrounding the lens. The lens is now disassembled!

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 07:13:22 AM.